The new model of the Otamatone comes up!!

オターー/。でほる Otamatone Digital



Functions


Back panel

Mode indication light

- · Green = Rock 'n' roll
- Blue = Percussion

Mode button

Press the button once to switch to Rock 'n' roll (harmony) mode. Hold it for 2 or more seconds to switch to Percussion mode.

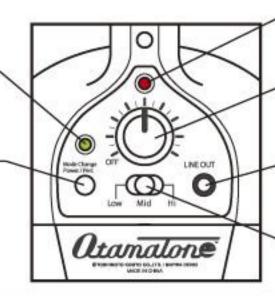

Power light

· Red = power on

Power/Volume control switch

 Power light comes on when the power is turned on.

Output jack

- For 3.5mm stereo mini plug
- This is to connect headsets, an amplifier, or a speaker.

Octave switch


Low/Mid/Hi

Mode



How to Play

Hold the Otamatone.

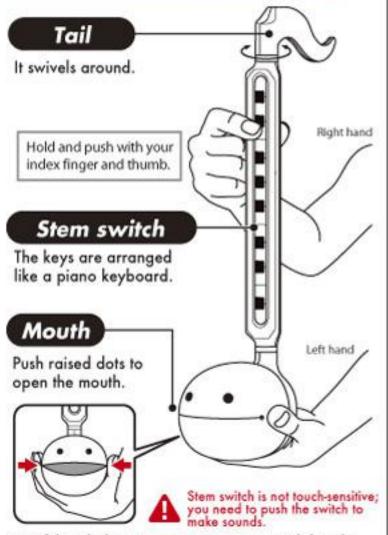


«Left-handed persons may want to switch hands.

Let's make some sounds!



Push Technique:

Push any key on the Stem switch. This will make "mmm" sound.

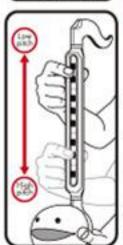

Slide Technique:

Push, hold the Stem switch, and slide the fingers up and down. This will make continuous sound like a glissando on a piano



Mouth Technique:

While pushing the Stem switch, open and close the mouth. The sound changes from "woo" to "wah." Repeat this to make "wah wah wah."



Mouth Technique does not work while using headsets.

Octave & Sound Mode

Octave

- · The keys are arranged like a regular piano keyboard as illustrated.
- · You can play harmonies by pushing more than two keys together.

